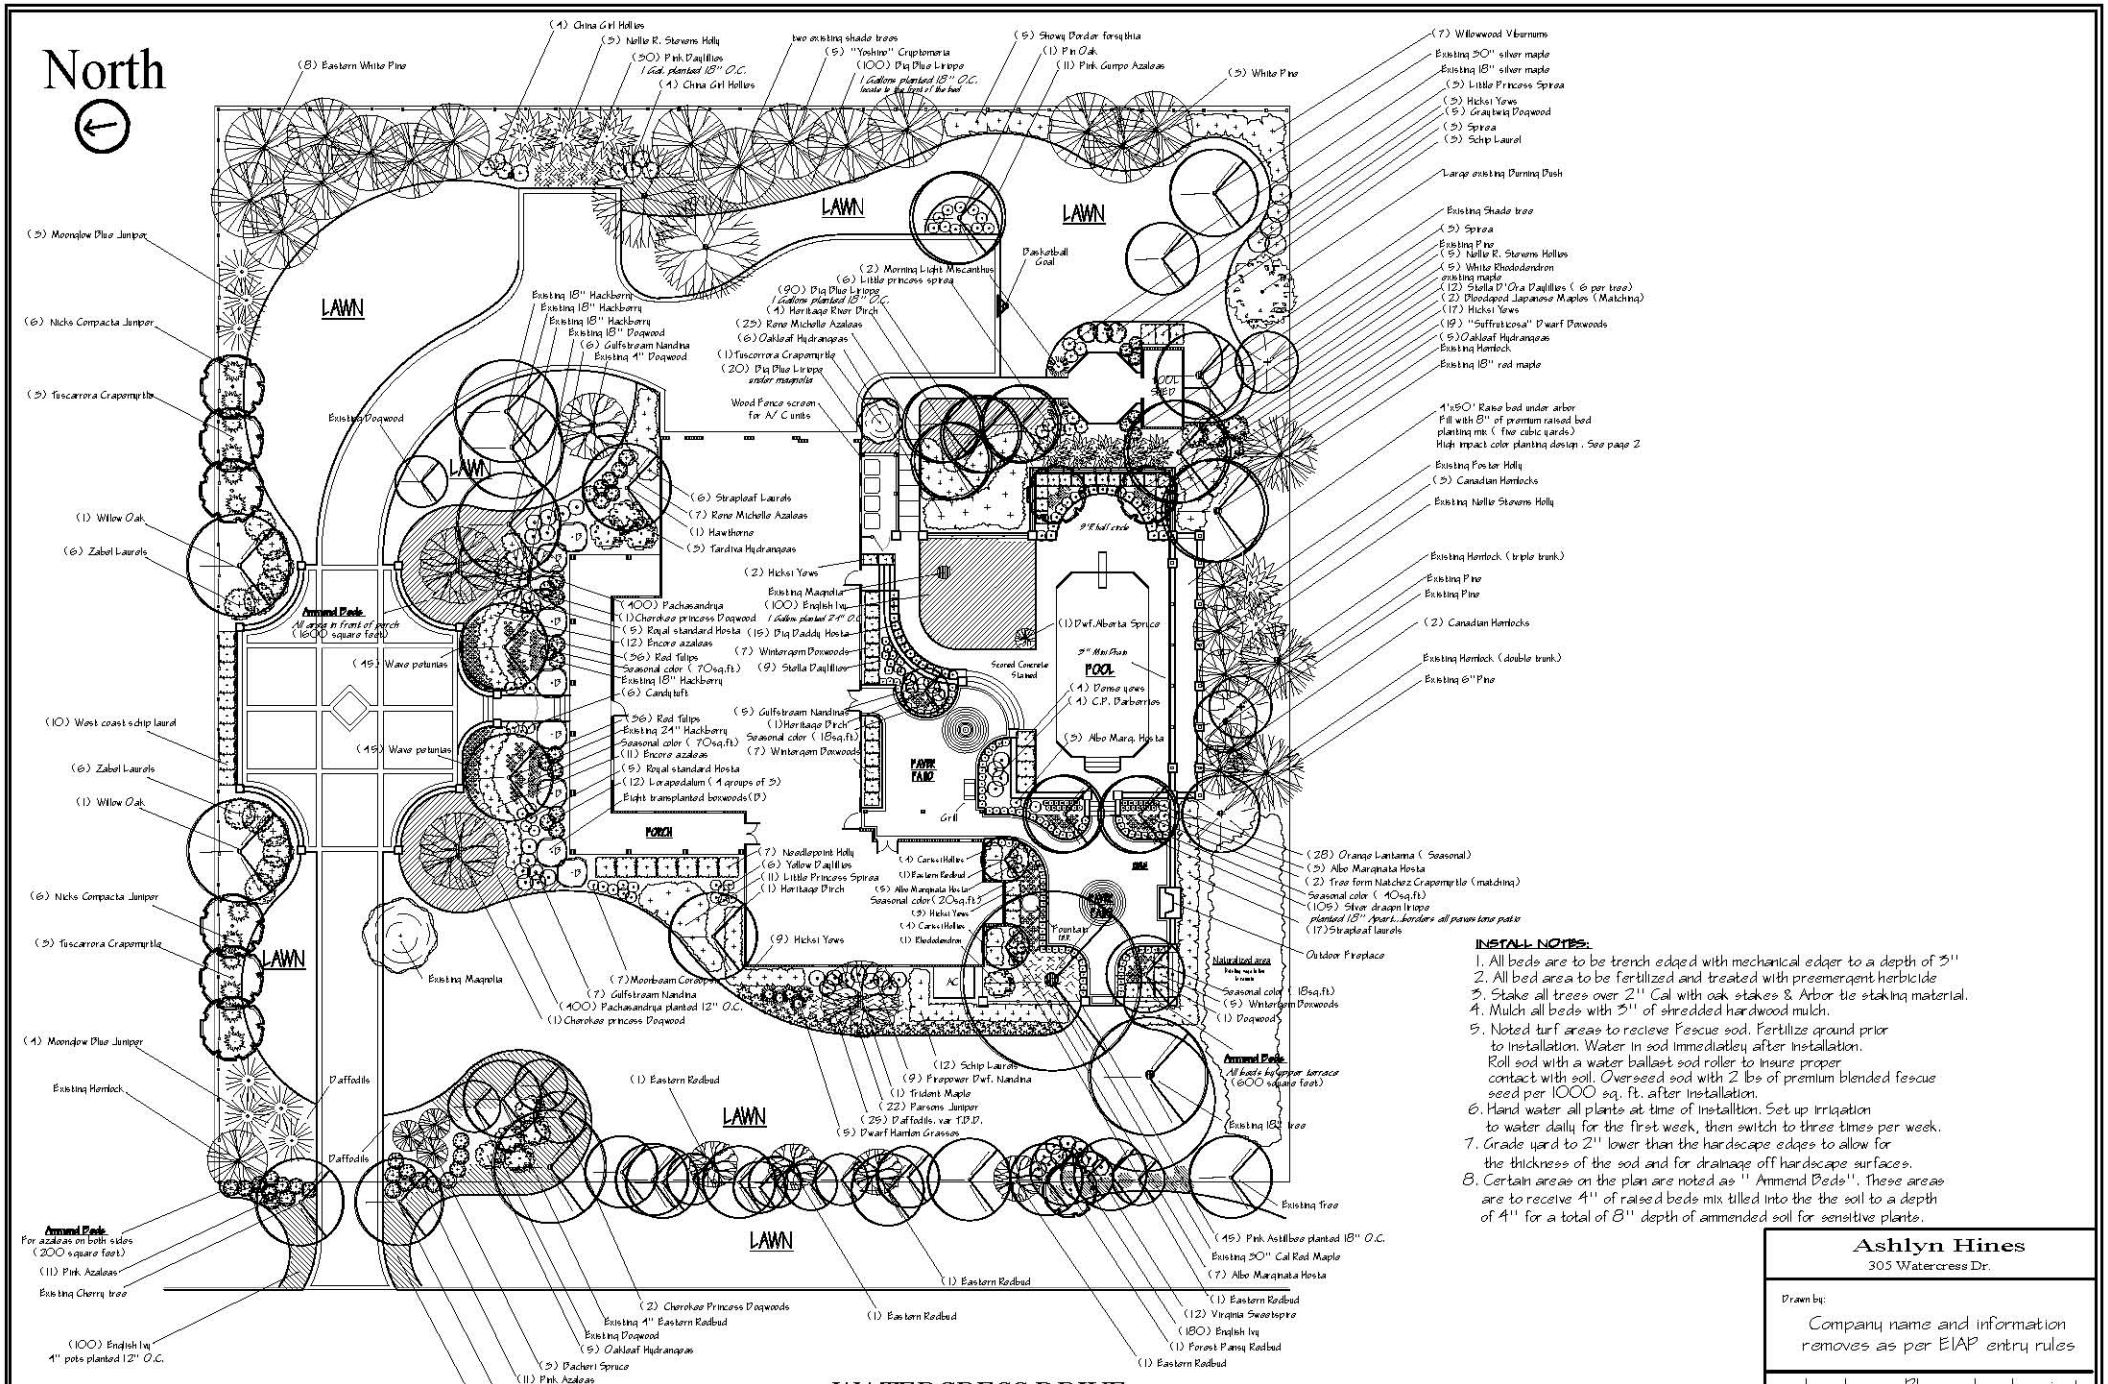

INSTALL NOTES:

1. All beds are to be trench edged with mechanical edger to a depth of 3"
2. All bed area to be fertilized and treated with preemergent herbicide
3. Stake all trees over 2" Cal with oak stakes & Arbor tie staking material.
4. Mulch all beds with 3" of shredded hardwood mulch.
5. Noted turf areas to recieve Fescue sod. Fertilize ground prior to installation. Water in sod immediatley after installation. Roll sod with a water ballast sod roller to insure proper contact with soil. Overseed sod with 2 lbs of premium blended fescue seed per 1000 sq. ft. after installation.
6. Hand water all plants at time of installtion. Set up irrigation to water daily for the first week, then switch to three times per week.
7. Grade yard to 2" lower than the hardscape edges to allow for the thickness of the sod and for drainage off hardscape surfaces.
8. Certain areas on the plan are noted as "Ammend Beds". These areas are to receive 4" of raised beds mix tilled into the the soil to a depth of 4" for a total of 8" depth of ammended soil for sensitive plants.

Ashlyn Hines
305 Watercress Dr.

Drawn by:
Company name and information removes as per EIAP entry rules

Landscape Plan and pool project

Scale: 1" = 16' | DATE: 8/1/08